


## ■ AIRBAG MANUAL ON-OFF SYSTEM

An airbag manual on-off system can be deactivated the front passenger airbag, front passenger knee airbag, and the front passenger side airbag by an airbag manual on-off switch to use only a child restraint system on the front passenger seat.

- The airbag manual on-off switch is operated ON/OFF by a mechanical key, which is supplied with the key. Once the airbag manual on-off switch turned to OFF, those airbag will be disabled, regardless of the collision conditions.
- If the deployment of the airbag has been disabled, the front passenger airbag OFF indicator light in the center cluster illuminates to inform the occupant.

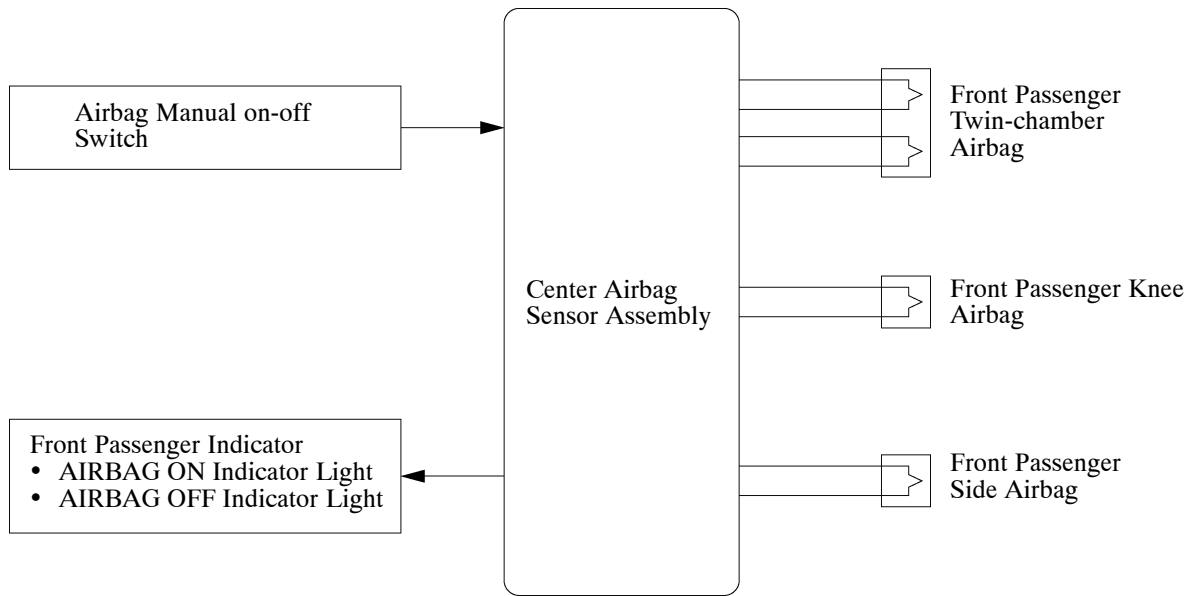

08E0BE242C

BE

- The front passenger SRS items and indicator lights operate as follows according to the airbag manual on-off switch condition:

×: Deploy    –: Not Deploy

Items		Airbag Manual on-off Switch	
		ON	OFF
Front Passenger SRS Items	Front Passenger Twin-chamber Airbag	×	–
	Knee Airbag	×	–
	Side Airbag	×	–
	Curtain Shield Airbag	×	×
	Seat Belt Pretensioner	×	×
Indicator Light	AIRBAG ON Indicator Light	Turn on	Turn off
	AIRBAG OFF Indicator Light	Turn off	Turn on