

■ DIAGNOSIS

If the center airbag sensor assembly detects a malfunction in the SRS airbag system, the center airbag sensor assembly stores the malfunction data in memory, in addition to illuminating the SRS warning light.

- There are 2 types of DTCs (Diagnostic Trouble Codes) for the SRS airbag system: 5-digit and 2-digit.
- The 5-digit DTCs can be read by connecting an intelligent tester to DLC3.
- The 2-digit DTCs can be read by connecting the SST (09843-18040) to the Tc and CG terminals of the DLC3 and reading the blinking of the SRS warning light.
- If the SRS airbags deploy, the center airbag sensor assembly will turn ON the SRS warning light. However, differing from the ordinary diagnosis function, a DTC will not be memorized. The SRS warning light can be turned OFF only by replacing the center airbag sensor assembly with a new one.

For details, see the LEXUS IS F Repair Manual (Pub. No. RM08E0E).