


■ WARNING METHOD

The timing chart of the buzzer and details of the warning method are shown below.

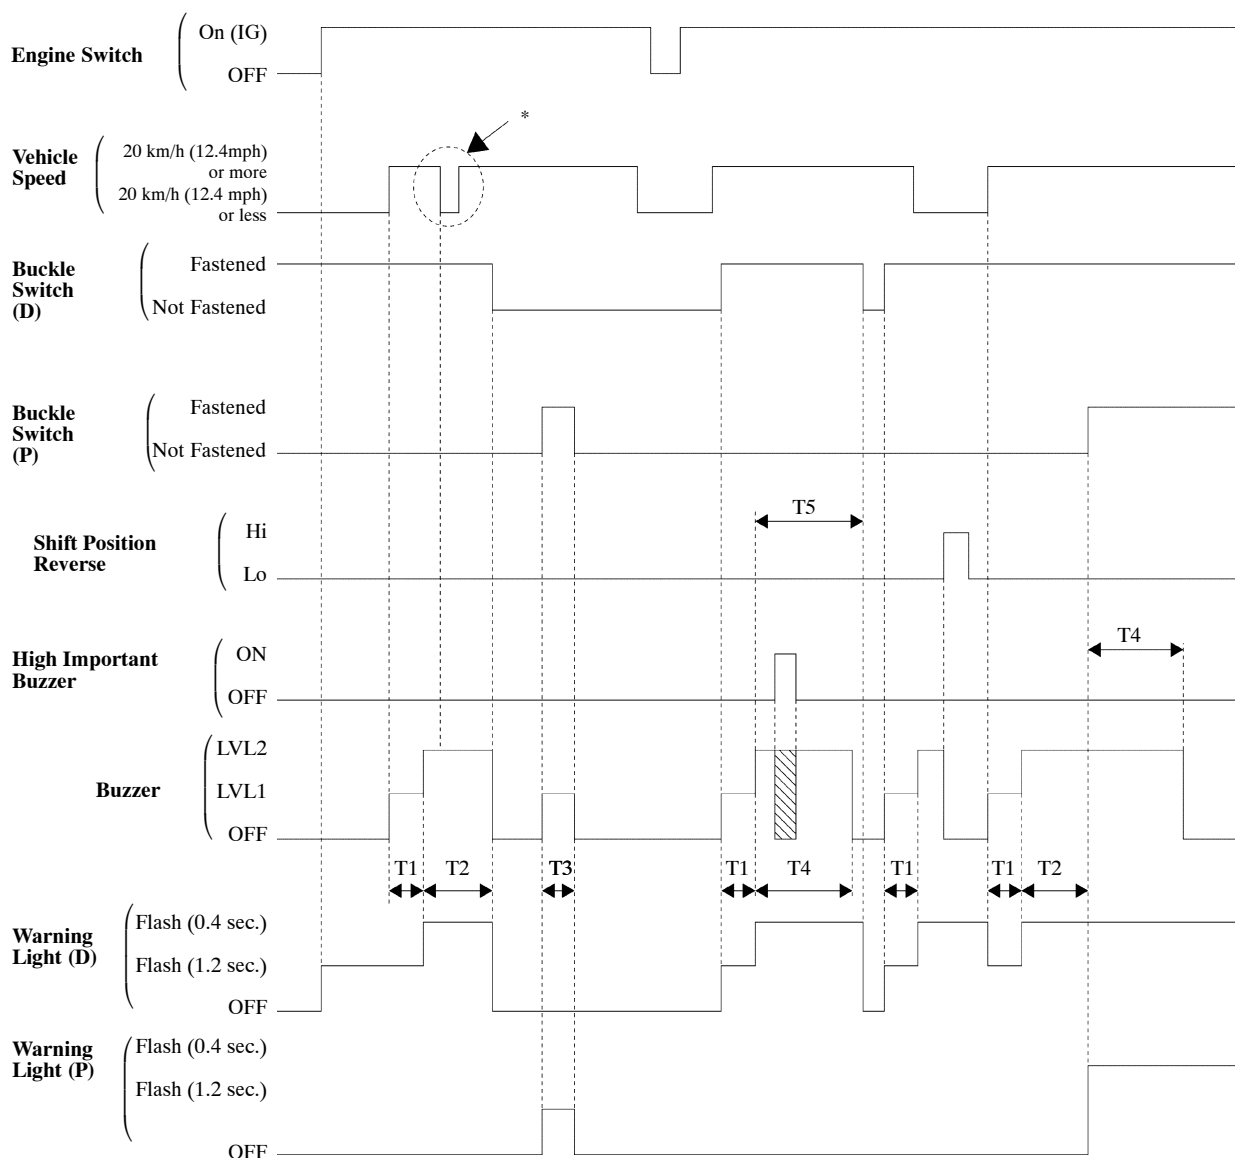

BE

0150BE50C

LVL1: Sound cycle is 1.2 sec.
LVL2: Sound cycle is 0.4 sec.

T1: About 30 sec.
T2: About 90 sec. or less
T3: About 30 sec. or less

T4: About 90 sec.
T5: About 90 sec. or more

*: If the vehicle speed drops below the setting level for seat belt warning after a buzzer begins to sound, the buzzer will continue to sound. After the vehicle speed exceeds 20 km/h (12.4 mph) again, the buzzer will stop.