


SYSTEM DIAGRAM

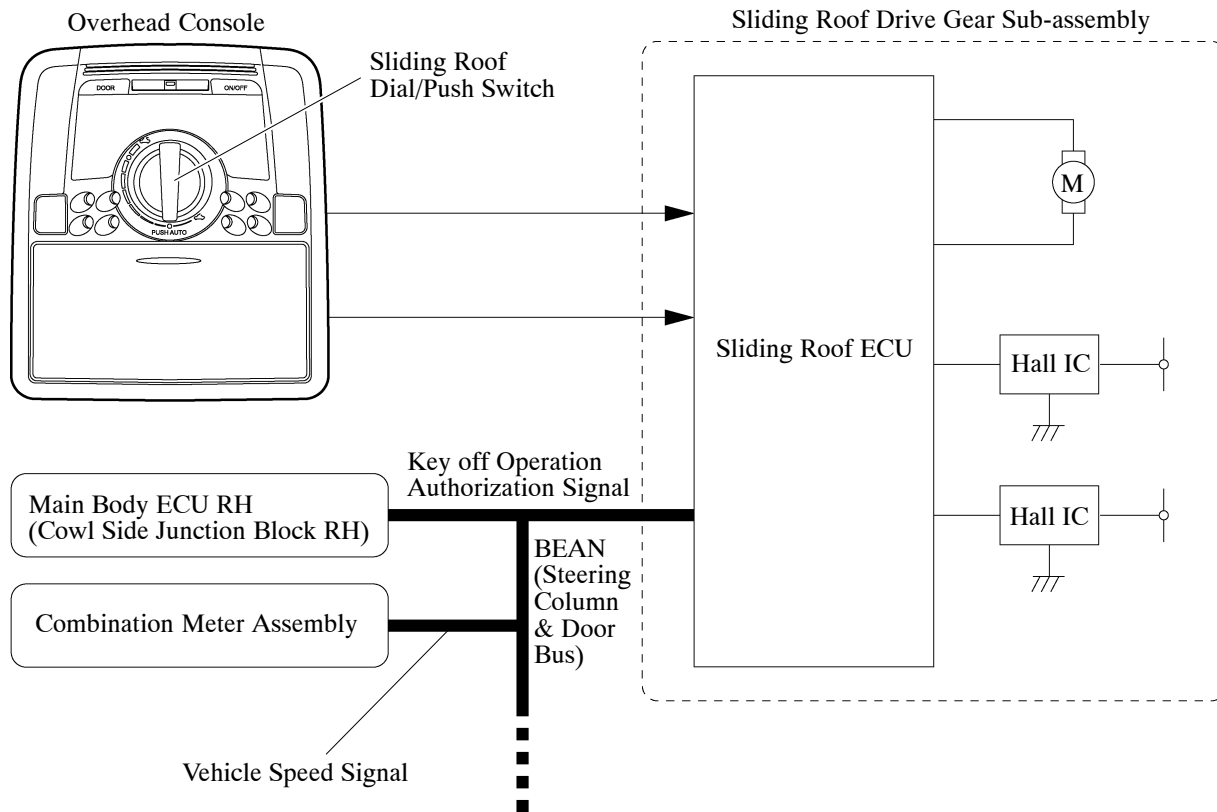

08D0BE75C

Service Tip

The stored initial position is not cleared even if the auxiliary battery terminals are disconnected. However, initialization is necessary after the sliding roof motor assembly is replaced. Perform initialization as follows.

- (1) Turn the engine switch on (IG).
- (2) If the sliding roof is open, move the sliding roof to a position close to the fully closed position.
- (3) Turn the rotary switch to the “over stroke position” (manual open position) and hold the switch in that position for 10 seconds.
- (4) Turn the rotary switch to the “full slide close position” and press and hold the rotary switch. The sliding roof tilts up and stops for approximately 1 second before it tilts down, slides open, and slides closed.
- (5) When the sliding roof stops at the fully closed position, initialization is completed.

NOTICE:

Continue pressing the rotary switch during initialization.

If the switch is released during initialization, perform the procedure from (2) again.

- (6) Check that the sliding roof operates normally for AUTO operation.

For details, see the LEXUS IS F Repair Manual (Pub. No. RM08E0E).