


■ SLIDING ROOF DIAL AND PUSH SWITCH

- A sliding roof dial and push switch is adopted. Pushing the dial switch causes the sliding roof to fully close or move to the comfort stop position. In addition, the sliding roof can be opened or closed according to the dial switch position.
- The adoption of a mechanical key-linked open-and-close function and transmitter-linked open function enables the sliding roof to be operated by the mechanical key or the transmitter.

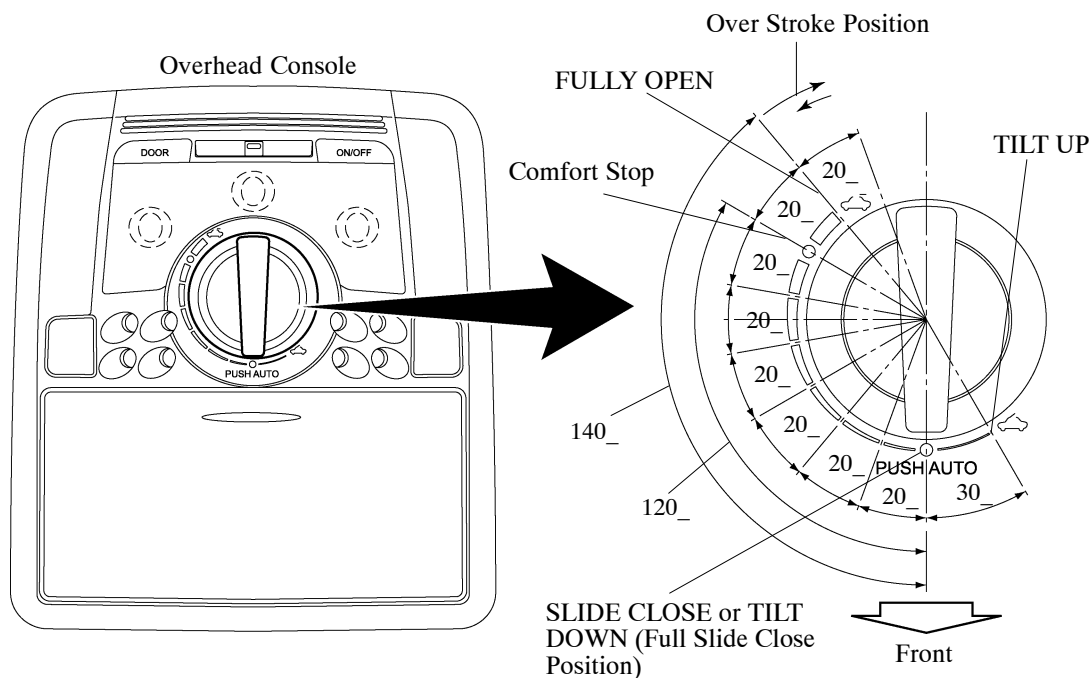

08D0BE103C

BE

■ WARNING

When the engine switch is turned from on (IG) to off and the driver door is opened when the sliding roof is open, the sliding roof drive gear sub-assembly (sliding roof ECU) sounds the buzzer in the combination meter. Then, a warning message appears on the multi-information display.

Warning Condition		The warning is activated if all of the following conditions are met: <ul style="list-style-type: none"> • Sliding roof is not fully closed. • Engine switch is off. • Driver door is opened.
Combination Meter Assembly	Buzzer	Sounds once
	Multi-information Display	<div style="background-color: black; color: white; padding: 10px; text-align: center;"> MOONROOF OPEN </div> 0140BE201C
Warning Stop Condition		The warning is stopped when one of the following conditions is met. <ul style="list-style-type: none"> • 8 seconds have elapsed after the warning condition is detected. • Engine switch is turned on (IG). • Driver door is closed.