

## THEFT DETERRENT SYSTEM

### ■ DESCRIPTION

The theft deterrent system can sound an alarm when somebody attempts to forcibly enter the vehicle, open the engine hood or trunk lid, or unlock any door or trunk lid without the entry function of the entry and start system, or when the battery terminals are removed and reconnected.

- The main body ECU RH (cowl side junction block RH) controls this system.
- The warning methods and timing of the system are listed below.

|                |                    |  |
|----------------|--------------------|--|
| Warning Method | Interior Lights    | Illuminate   |
|                | Hazard Lights      | Blink  |
|                | Vehicle Horn       | Sounds (approx. 0.4 second cycles)                             |
|                | Self-Powered Siren | Sounds a warning at the cycle of the self-powered siren itself |
|                | Door Lock Motors   | Lock   |
| Warning Time   |                    | 30 seconds   |