

■ FUNCTION

The theft deterrent system has the following functions:

Function	Outline
Alarm	When the theft deterrent system is enters the alarm state, the warning items (interior light, hazard light and self-powered siren) are operated for approximately 30 seconds.
Vehicle Horn Alarm	When the theft deterrent system is enters the alarm state, the vehicle horn is operated for approximately 30 seconds.
Alarm Indicator	When the state of the theft deterrent system enters the armed preparation or alarm state, the security indicator light is illuminated to inform the user. This indicator is also the engine immobilizer indicator, it blinks when the engine immobilizer is in an engaged state.
Forced Door Lock	The main body ECU RH (cowl side junction block RH) transmits a door lock signal to all the doors when all the following conditions are satisfied. <ul style="list-style-type: none"> • The theft deterrent system is in the alarm state. • Key is not in the actuation area. • One of the front doors has been unlocked. The function stops when one of the following conditions is met. <ul style="list-style-type: none"> • All doors are locked. (lock function of door lock or transmitter is operated). • The warning ends after approximately 30 seconds. • Key is in the actuation area.
Self-powered Siren	During normal alarm operation (theft indication), this siren sounds an alarm in accordance with the operation signals from the main body ECU RH (cowl side junction block RH). Because this siren has an internal battery, it can independently sound an alarm even if the vehicle's battery terminals are disconnected or if the wiring harnesses that are related to the system are cut.