


## SYSTEM OPERATION

The states of the theft deterrent system are as follows:

×: Detected    -: Not Detected

State	Description	Theft Detection
Disarmed State	The theft deterrent system is not set by the user.	–
Armed Preparation State	The standby state before the theft deterrent system activates when the system has already set.	–
Armed State	The theft deterrent system is activated. (Theft can be detected.)	×
Alarm State	Theft has been detected and the warning operation is active.	×

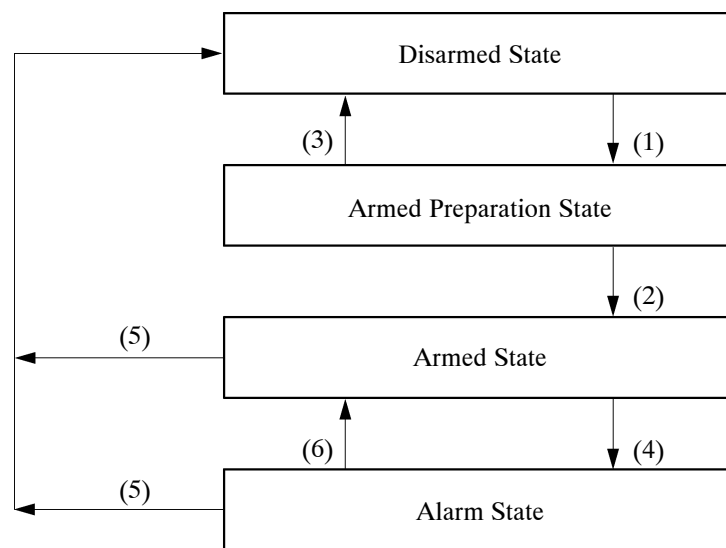

06J0BE130C

The theft deterrent system activates as described in the diagram below when one of items in the chart occurs in order to cause the system to enter the respective state.

Condition	Item
(1)	In the disarmed state, when the key is not in the actuation area, the system enters the armed preparation state if all of the following conditions are met. <ul style="list-style-type: none"> <li>• All doors, engine hood and trunk lid are closed.</li> <li>• All doors are locked using the entry and start system.</li> </ul>
(2)	The system enters the armed state when 30 seconds have elapsed after the doors, engine hood, and trunk lid are all closed and locked.
(3)	The system returns to the disarmed state when one of the following conditions is met. <ul style="list-style-type: none"> <li>• Any door, the engine hood, or trunk lid is opened.</li> <li>• Any door is unlocked.</li> <li>• The engine switch is pushed.</li> <li>• A terminal is disconnected from the battery and reconnected.</li> </ul>

(Continued)

Condition	Item
(4)*	<p>The system enters the alarm state when one of the following conditions is met.</p> <ul style="list-style-type: none"> <li>Any door or engine hood is opened.</li> <li>Any door or trunk lid is unlocked by a method other than the entry and start system.</li> <li>A terminal is disconnected from the battery. (The self-powered siren will sound as a warning in the alarm state.)</li> <li>A terminal is disconnected from the battery and reconnected. (The vehicle horn and self-power siren will sound and the hazard warning lights and interior lights will flash as a warning in the alarm state.)</li> <li>The intrusion sensor has detected an intruder.</li> </ul>
(5)	<p>The system returns to the disarmed state when one of the following conditions is met.</p> <ul style="list-style-type: none"> <li>Any door is unlocked with the entry and start system.</li> <li>The trunk lid is opened with the entry and start system.</li> <li>The engine switch is changed to ACC or on (IG).</li> </ul>
(6)	The system returns to the armed state after the alarm time elapses.

\*: If the apparent theft continues to be detected, the warning will resume 5 seconds after the previous warning.  
The warning will repeat a maximum of 10 times for each detection condition.