
■OIL PUMP ASSEMBLY

- The oil pump assembly is driven by the torque converter clutch assembly. It lubricates the planetary gear units and supplies operating fluid pressure for hydraulic control.
- The pump cover is made of aluminum to reduce weight.
- A pump cover with an integrated piston cylinder for the B₁ brake is used.

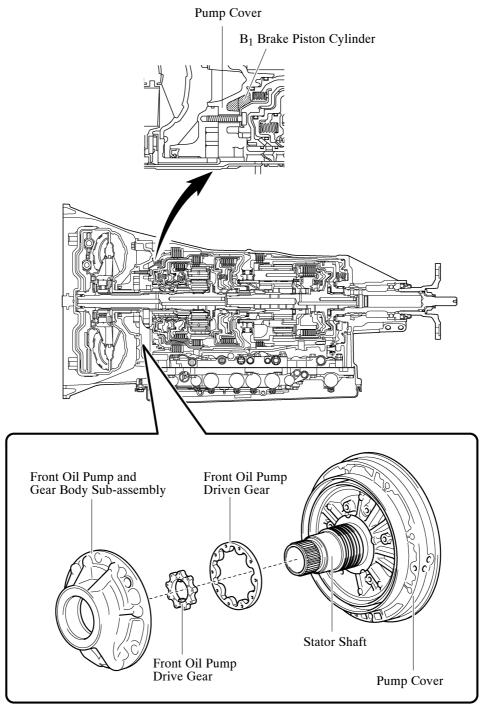

Oil Pump Assembly