

Pre-crash Safety System

The pre-crash safety system retracts the front seatbelts, brings the brake control system to the Brake Assist standby condition, and applies the brakes in the below condition before collision to reduce damage to the driver and front passenger.

Operating Condition	<ul style="list-style-type: none"> • When a collision with an obstacle in front of the vehicle or the vehicle ahead is determined unavoidable. • When the front wheels lose grip in relation to the rear wheels (front wheel skid tendency). • When the rear wheels lose grip in relation to the front wheels (rear wheel skid tendency). • When the brakes are suddenly applied.
---------------------	---

MO

