



REPLACEMENT

1. IF NECESSARY, DISCONNECT MIRROR


- (a) Insert a shop rag between the mirror and the mirror body.
- (b) Pull up the lower side of the shop rag to disconnect the mirror joint.

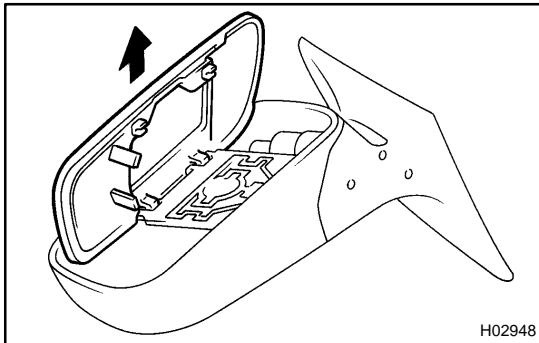

- (c) Pull up the mirror and disconnect it.

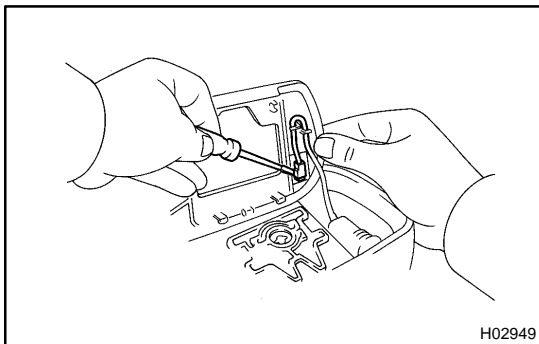

- (d) Disconnect the connectors.

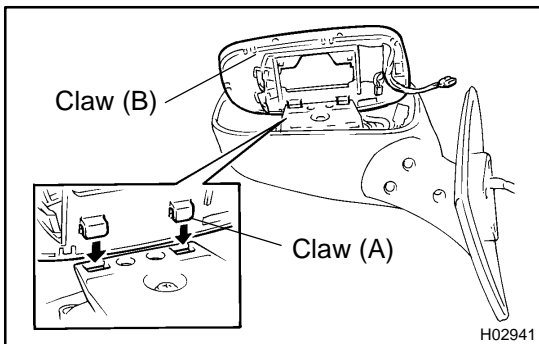

2. CONNECT MIRROR

- (a) Connect the connectors.
- (b) Fit the claws (A) in the holes and set the mirror to the mirror body.
- (c) Push the mirror to fix it by fitting the claws (B) in the holes.