


## ADJUSTMENT


### 1. ADJUST LUGGAGE COMPARTMENT DOOR

- Remove the 3 clips.
- Open the cover and remove the hinge cover.
- Employ the same manner described above to the other side.

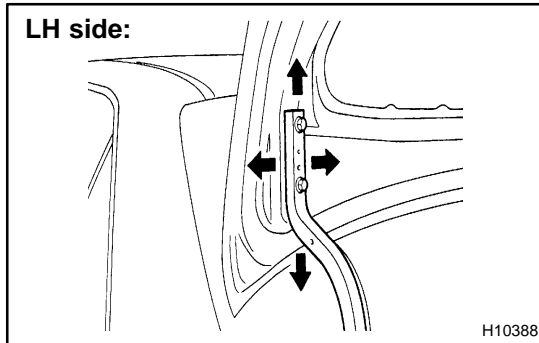

- For forward / rearward and left / right adjustments, loosen the bolts.
- For vertical adjustment of front end of the door, increase or decrease the number of washers between the hinge and the door.

**Torque: 8.0 N·m (82 kgf·cm, 72 in.-lbf)**

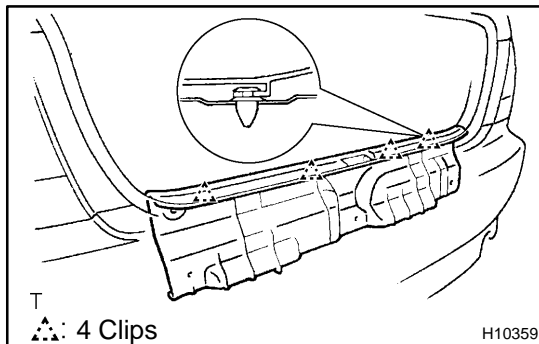


### 2. ADJUST DOOR LOCK STRIKER

- Using a clip remover, remove the 5 clips.
- Using a screwdriver, remove the rear floor finish plate.

**HINT:**

Tape the screwdriver tip before use.

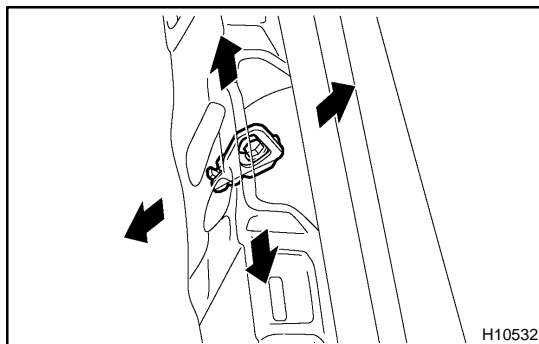

- Using a hammer and brass bar, tap the striker to adjust it.
- Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)**