


## DISASSEMBLY

1. REMOVE PACKINGS
2. REMOVE RADIATOR CAP
3. REMOVE DRAIN PLUG

- (a) Remove the drain plug.
- (b) Remove the O-ring.

4. REMOVE ECT SWITCH

- (a) Remove the ECT switch.
- (b) Remove the O-ring.

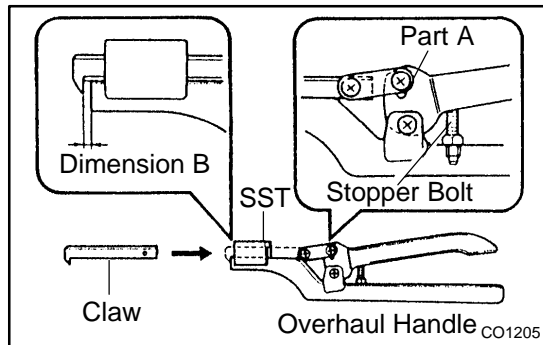

5. ASSEMBLE SST


SST 09230-01010

- (a) Install the claw to the overhaul handle, inserting it in the hole in part A as shown in the diagram.
- (b) While gripping the handle, adjust the stopper bolt so that dimension B is as shown in the illustration.

**Dimension B: 0.2 - 0.3 mm (0.008 - 0.012 in.)**

### NOTICE:


**If this adjustment is not done the claw may be damaged.**

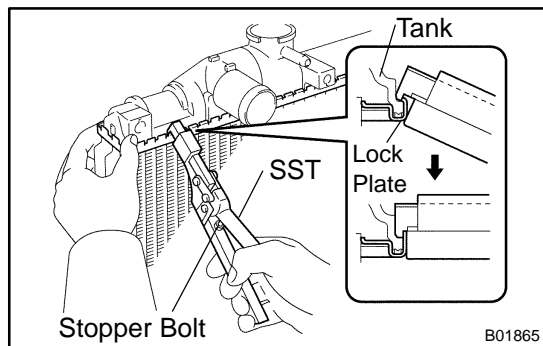

6. UNCAULK LOCK PLATES


Using SST to release the caulking, squeeze the handle until stopped by the stopper bolt.

SST 09230-01010

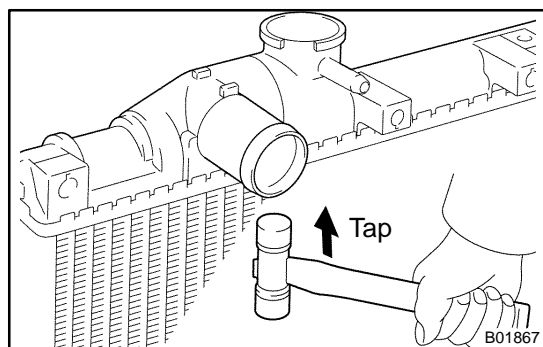

7. REMOVE TANKS AND O-RINGS

Lightly tap the bracket of the radiator (or radiator inlet or outlet) with a soft-faced hammer, and remove the tank and the O-ring.

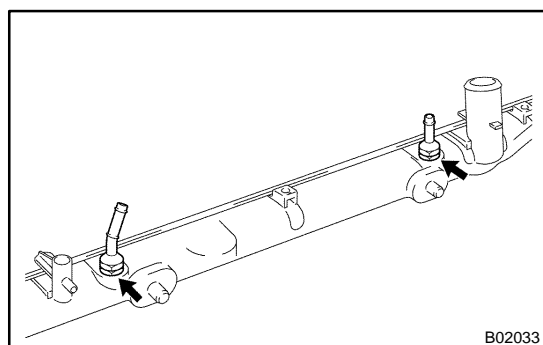

8. A/T:

### REMOVE OIL COOLER FROM LOWER TANK

- (a) Loosen the nut, and remove the cooler pipe. Remove the 2 cooler pipes.
- (b) Remove the 2 nuts and 2 plate washers.
- (c) Remove the oil cooler and 2 O-rings.