

## INSTALLATION


### 1. CLEAN BODY MOUNTING SURFACE

- (a) Using a heat light, heat the body mounting surface to 40 - 60 °C (104 - 140 °F).

#### NOTICE:

**Do not heat the body excessively.**

- (b) Remove the adhesive tape from the body.  
(c) Wipe off stains with cleaner.

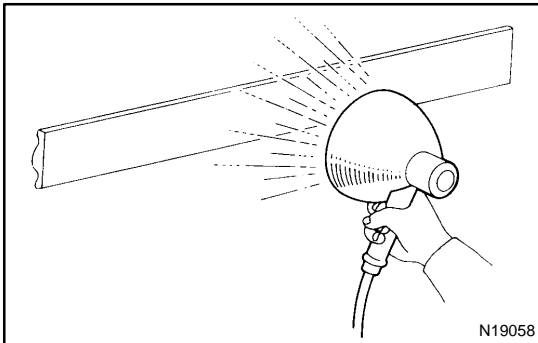



### 2. If reusing the moulding: CLEAN MOULDING

- (a) Using a heat light, heat the moulding to 20 - 30 °C (68 - 86 °F).

#### NOTICE:

**Do not heat the moulding excessively.**

- (b) Remove the adhesive tape from the moulding.  
(c) Wipe off stains with cleaner.  
(d) Apply a new adhesive tape to the moulding as shown in the illustration.

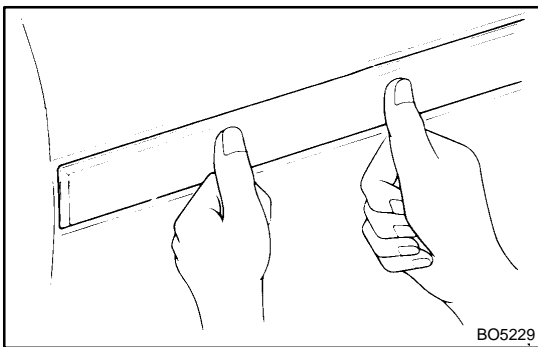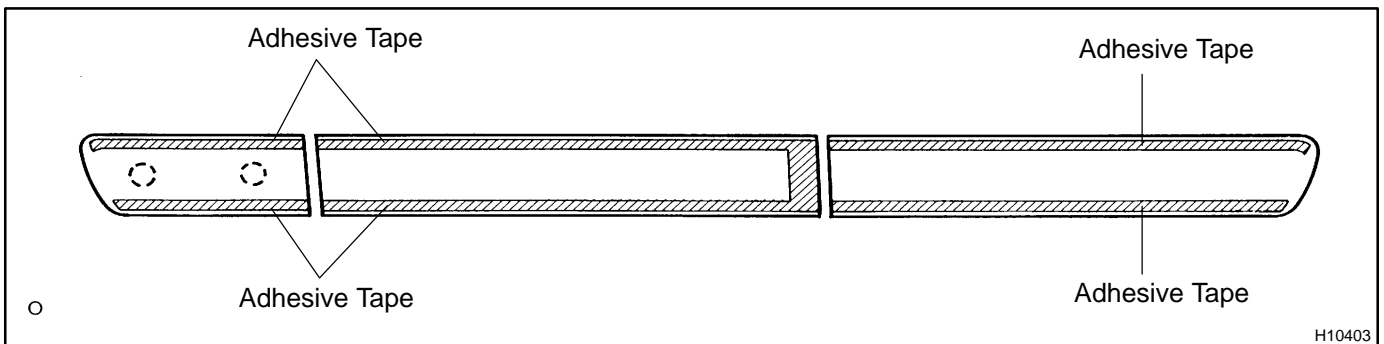

### 3. INSTALL MOULDING

- (a) Using a heat light, heat the body and moulding.  
**Body: 40 - 60 °C (104 - 140 °F)**  
**Moulding: 20 - 30 °C (68 - 86 °F)**

#### NOTICE:

**Do not heat the moulding excessively.**

- (b) Lift the moulding release sheet from face of the moulding.

#### NOTICE:

**Before installing the moulding release sheet, make sure that there is no dirt or dust can get on the adhesive surface of the moulding.**

- (c) Front fender outside moulding:  
Align the bosses with their corresponding holes in the body, and press firmly on the moulding.

#### NOTICE:

**Do not apply excessive force on to the moulding, but steady pressure with thumbs.**