



COWL TOP TO APRON BLACE (ASSY)

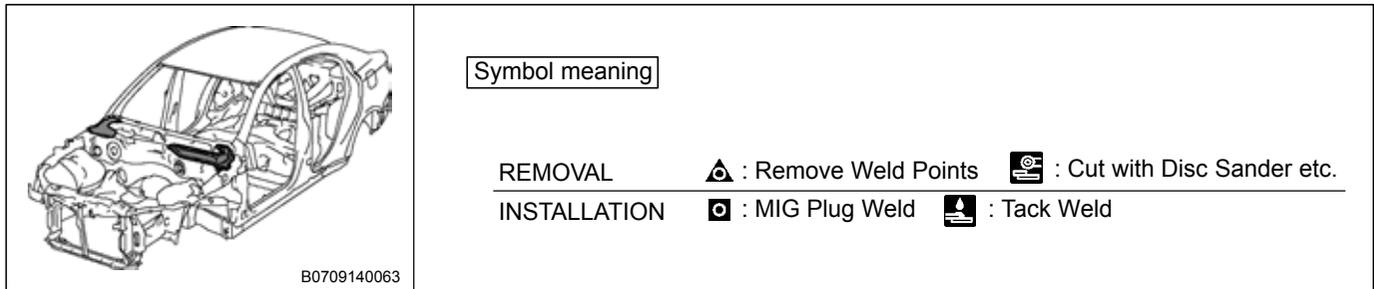


REMOVAL-INSTALLATION

RHD:

[LH]

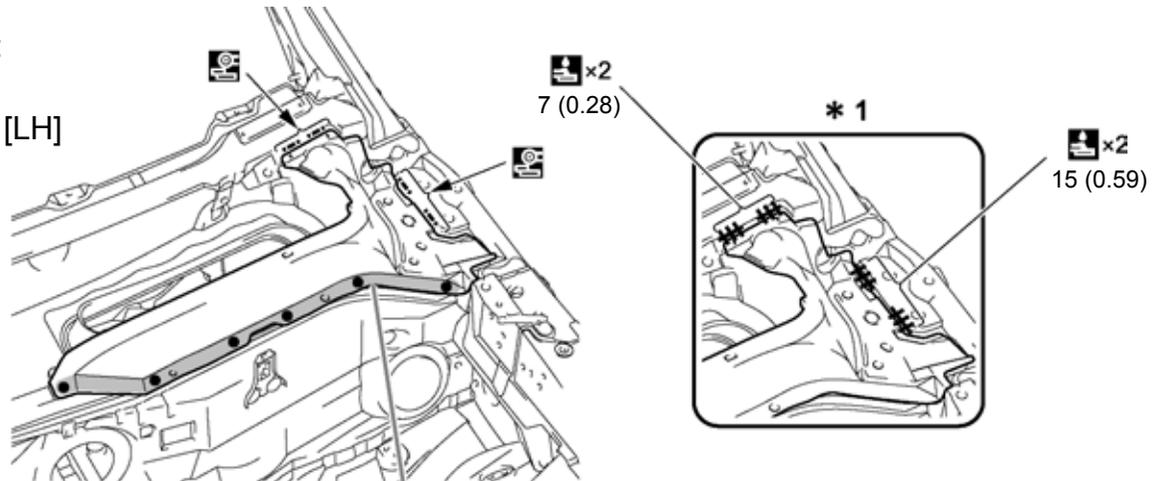

[RH]

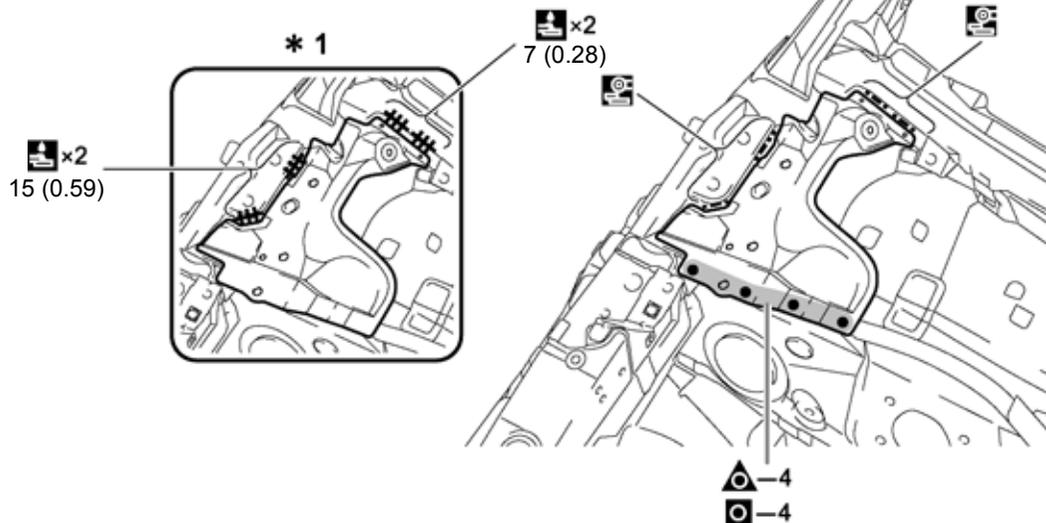



mm (in.)

B0709140064



INSTALLATION POINT

- 1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 2 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.
- 5 *1 shows installation work.

LHD:

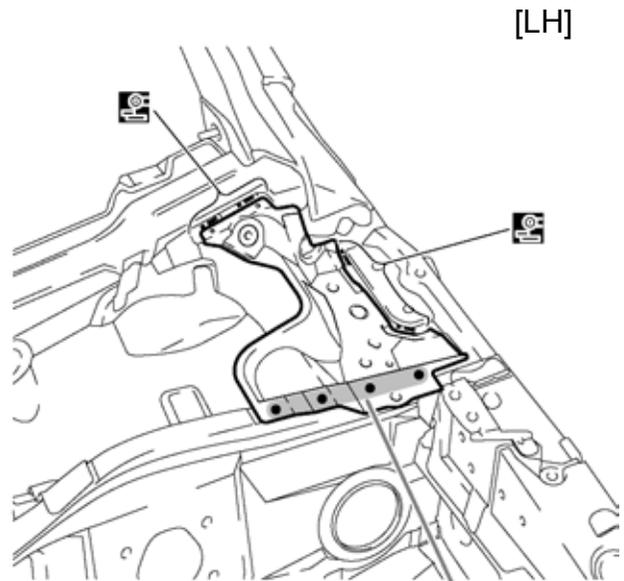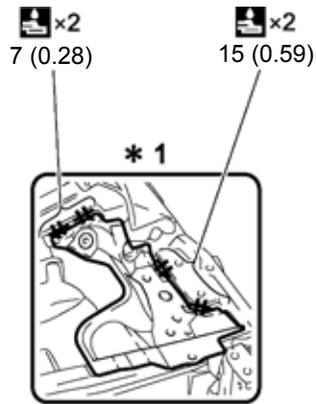

[RH]

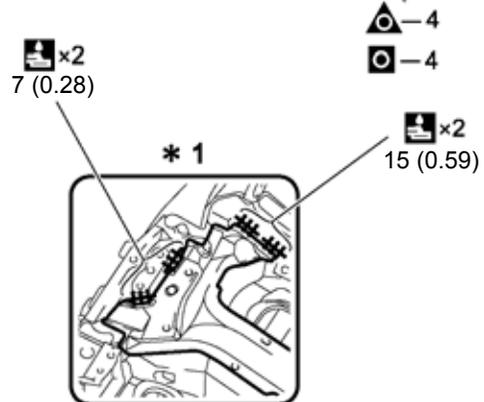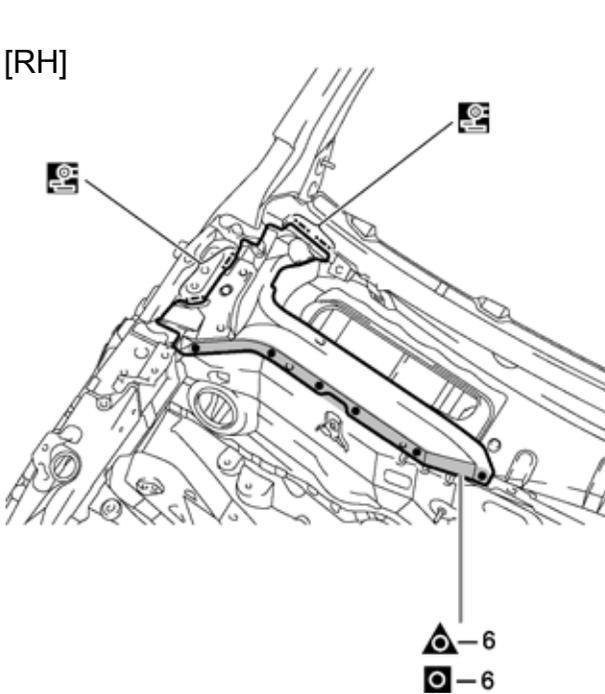

mm (in.)

B0709140065

INSTALLATION POINT

- 1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 2 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.
- 5 *1 shows installation work.