
BO2CC-04

# **INSTALLATION**

- 1. INSTALL OUTSIDE REAR VIEW MIRROR
- (a) Install the outside rear view mirror with the bolt.

  Torque: 8.0 N-m (82 kgf-cm, 71 in.-lbf)
- (b) Connect the connector.

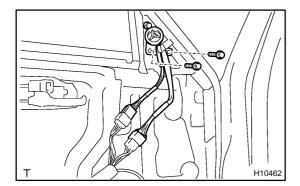


#### 2. INSTALL FRONT NO.2 SPEAKER

(a) Install the front No.2 speaker with the 2 bolts.


Torque: 8.0 N-m (82 kgf-cm, 71 in.-lbf)

(b) Connect the connector.

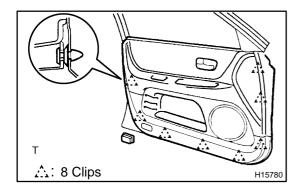


#### 3. INSTALL DOOR TRIM

- (a) Install the door trim to the door panel.
- (b) Connect the connector, then install the courtesy light.

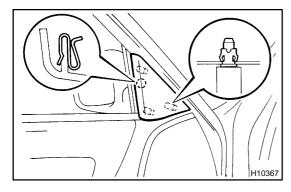

## 4. INSTALL LOWER FRAME BRACKET GARNISH

Install the lower frame bracket garnish to the door panel.

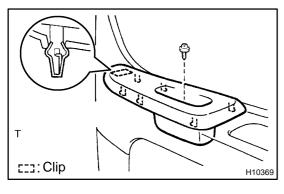


### 5. INSTALL FRONT ARMREST

Install the front armrest with the screw.

2005 LEXUS IS300 (RM1140U)

Author: Date: 2286

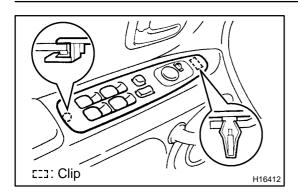

## 6. INSTALL POWER WINDOW SWITCH

- (a) Connect the connectors.
- (b) Install the power window switch.
- 7. INSTALL INSIDE HANDLE BEZEL
- (a) Install the inside handle bezel with the screws.
- (b) Close the screw cap.

Author: Date: 2287