


## REMOVAL

### 1. REMOVE BACK DOOR TRIM BOARD UPPER

Using a screwdriver, remove the back door trim board upper.

HINT:

Tape the screwdriver tip before use.

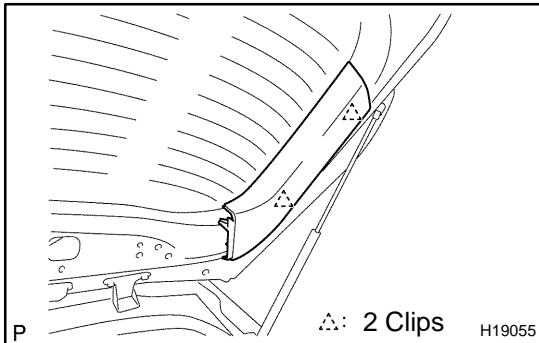


### 2. REMOVE BACK DOOR TRIM COVERS

- Insert a screwdriver between the back door panel and back door trim cover to pry the cover.

HINT:

Tape the screwdriver tip before use.

- Employ the same manner described above to the other side.

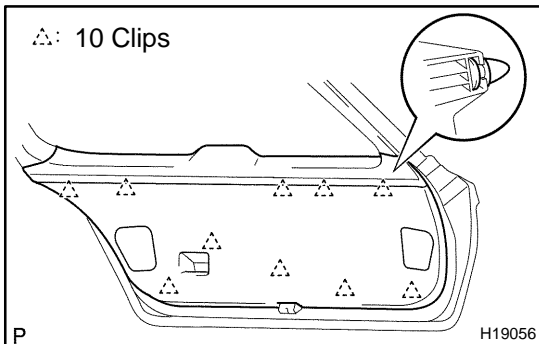


### 3. REMOVE BACK DOOR TRIM BOARD

- Remove the clip and back door handle.
- Using a screwdriver, remove the back door trim board.


HINT:

Tape the screwdriver tip before use.

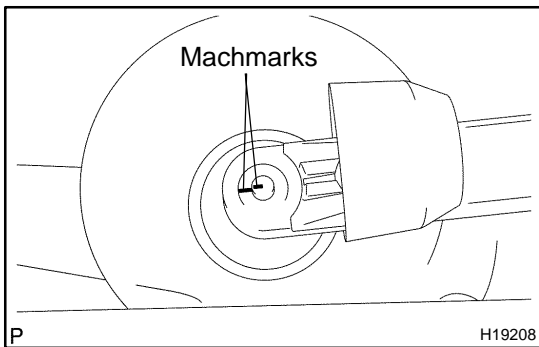

### 4. REMOVE REAR WIPER ARM

- Open the wiper arm cover.
- Place matchmarks on the wiper arm and wiper motor.
- Remove the nut and rear wiper arm.

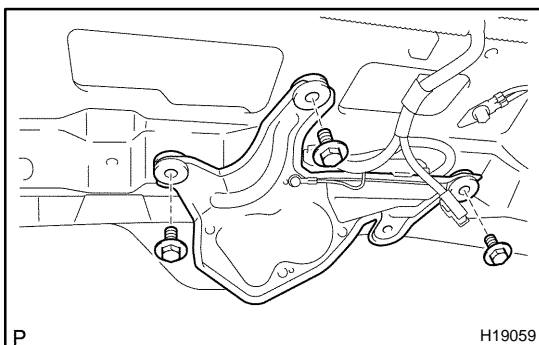

### 5. REMOVE REAR WIPER MOTOR

- Remove the nut and washer on the outer side of the back door panel.
- Disconnect the connector.
- Remove the 3 bolts and rear wiper motor.