


REASSEMBLY

Reassembly is in the reverse order of disassembly
(See page [BR-42](#)).

HINT:

Apply high temperature grease to the parts indicated by the arrows (See page [BR-41](#)).

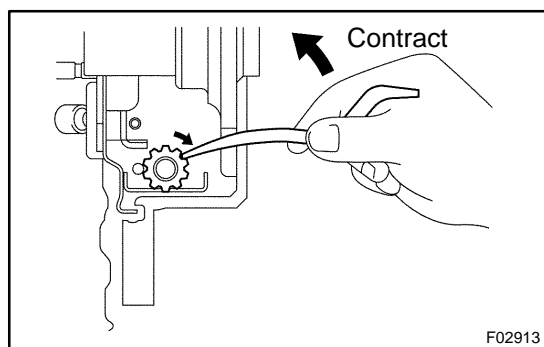

1. ADJUST PARKING BRAKE SHOE CLEARANCE

- (a) Temporarily install the 3 hub nuts.
- (b) Remove the hole plug.
- (c) Turn the adjuster and expand the shoes until the disc locks.
- (d) Return the adjuster 8 notches.
- (e) Install the hole plug.

2. SETTLING PARKING BRAKE SHOES AND DISC

- (a) Drive the vehicle at about 50 km/h (31 mph) on a safe, level and dry road.
- (b) With the parking brake release button pushed in, pull on the parking brake lever with 88 N (9 kgf, 20 lbf) of force.
- (c) Drive the vehicle for about 400 meters (0.25 mile) in this condition.
- (d) Repeat this procedure 2 or 3 times.

3. CHECK AND ADJUST PARKING BRAKE LEVER TRAVEL (See page [BR-9](#))