

RS02Q-14

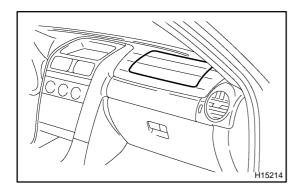


INSPECTION

- Vehicle not involved in collision : INSPECT SUPPLEMENTAL RESTRAINT SYSTEM
- (a) Do a diagnostic system check (See page DI-607).
- (b) Do a visual check which includes the following item with the front passenger airbag assembly installed in the vehicle.
 - Check cuts, minute cracks or marked discoloration on the front passenger airbag assembly and instrument panel.
- 2. Vehicle involved in collision and airbag is not deployed:
 - **INSPECT SUPPLEMENTAL RESTRAINT SYSTEM**
- (a) Do a diagnostic system check (See page DI-607).

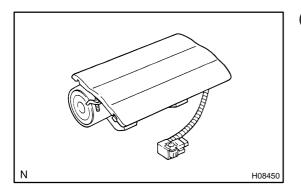

- (b) Do a visual check which includes the following items with the front passenger airbag assembly removed from the vehicle.
 - Check cuts, minute cracks or marked discoloration on the front passenger airbag assembly.
 - Check cuts and cracks in the wire harness, and for chipping in the connectors.

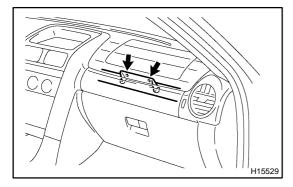

• Check the deformation or cracks on the instrument panel and instrument panel reinforcement.

CAUTION:

For removal and installation of the front passenger airbag assembly, see page RS-28 and RS-38, and be sure to follow the correct procedure.


HINT:

If the instrument panel or instrument panel reinforcement is deformed or cracked, never repair it. Always replace it with a new one.

2005 LEXUS IS300 (RM1140U)

Author: Date: 1945

- 3. Vehicle involved in collision and airbag is deployed: INSPECT SUPPLEMENTAL RESTRAINT SYSTEM
- (a) Do a diagnostic system check (See page DI-607).

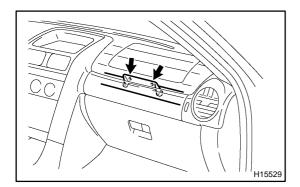

- (b) Do a visual check which includes the following items with the front passenger airbag assembly removed from the vehicle.
 - Check the deformation or cracks on the instrument panel and instrument panel reinforcement.
 - Check the damage on the connector and wire harness.

CAUTION:

For removal and installation of the front passenger airbag assembly, see page RS-28 and RS-38, and be sure to follow the correct procedure.

HINT:

If the instrument panel or instrument panel reinforcement is deformed or cracked, never repair it. Always replace it with a new one.

2005 LEXUS IS300 (RM1140U)

Author: Date: 1946