













POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

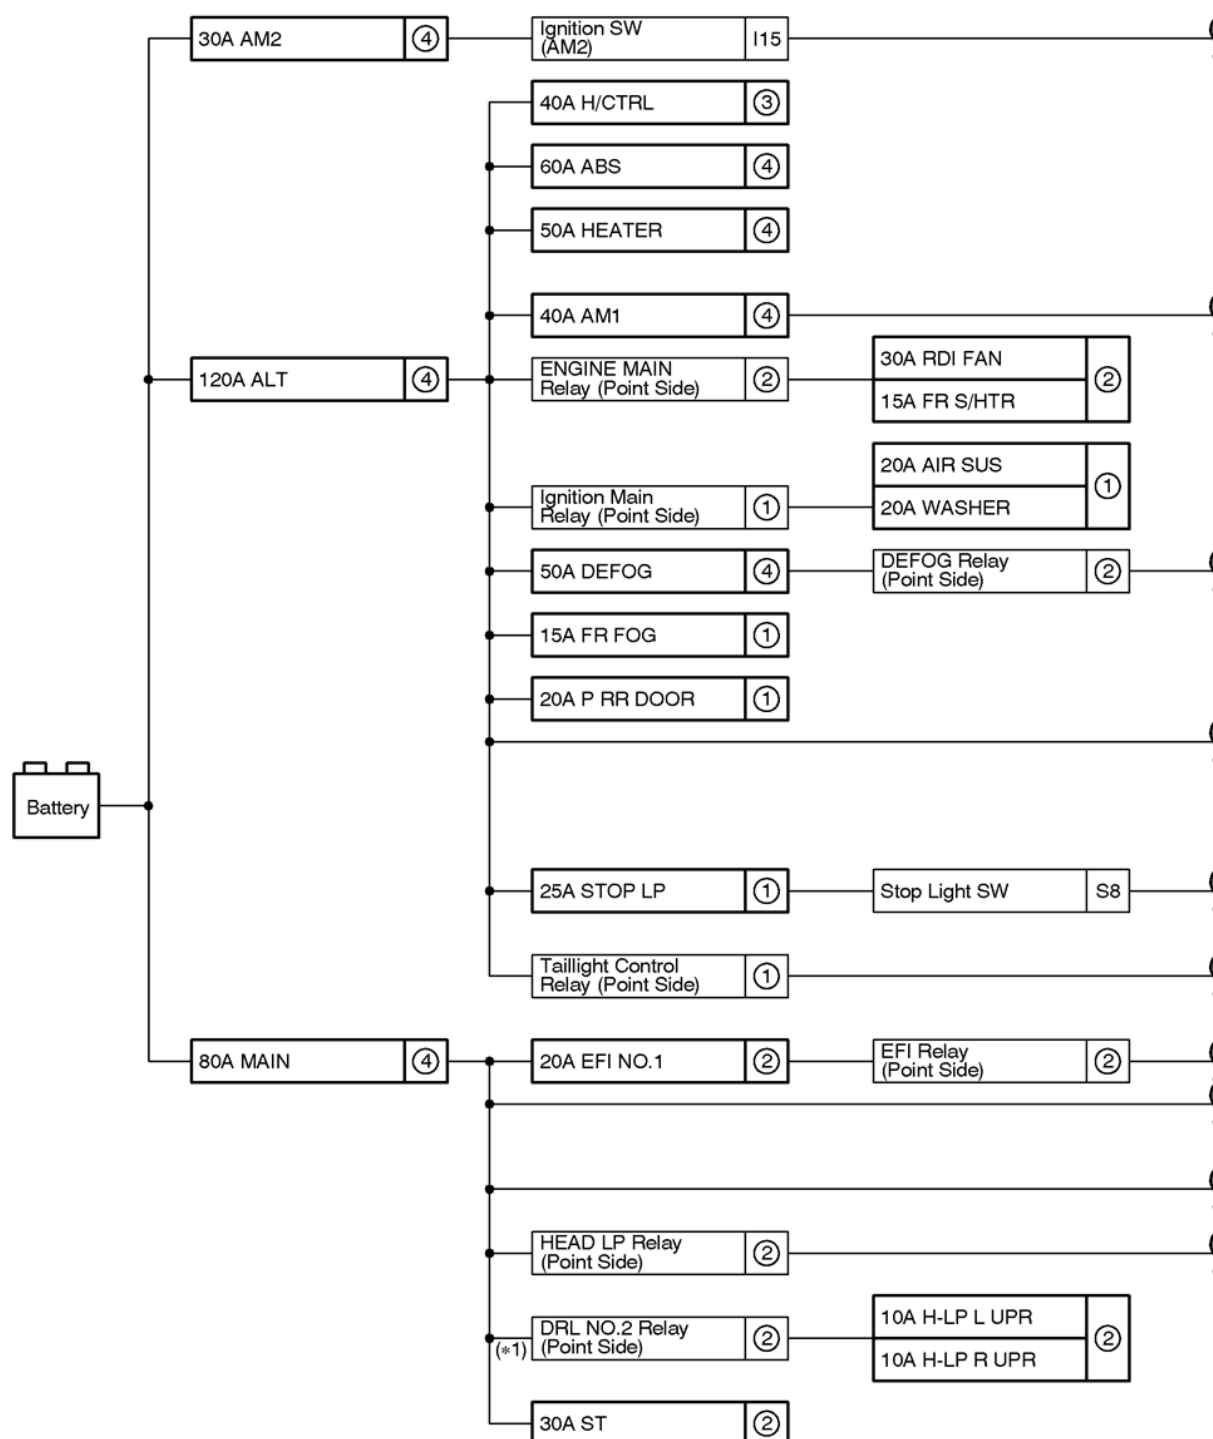

[LOCATION] ① : Instrument Panel J/B (See page 22) ② : Engine Room J/B (See page 24)
 ④ : Fusible Link Block (F15 See on page 31) ⑤ : Fuse Holder (F37 See on page 34)

*1 : w/ Daytime Running Light
 *2 : w/o Daytime Running Light

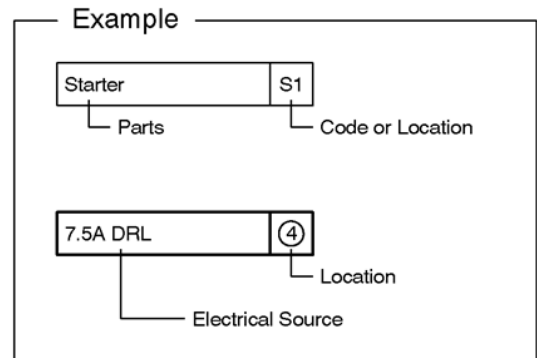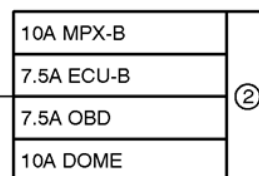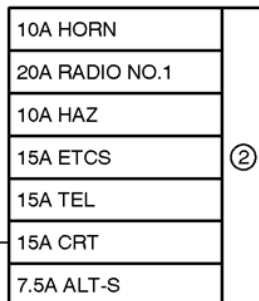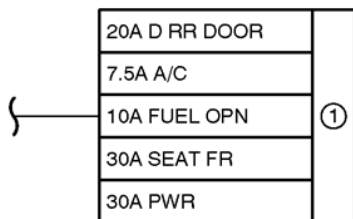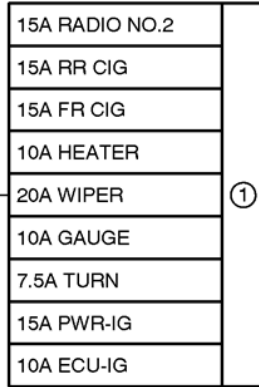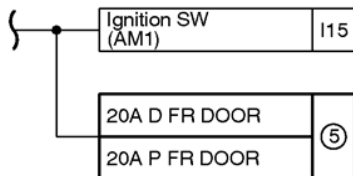

③ : Engine Room R/B (See page 30)

POWER SOURCE (Current Flow Chart)

Instrument Panel J/B

			64
			200
			82
		PPS	246
		VSC	208
10A	FUEL OPN	Fuel Lid Opener	240
		Power Shoulder Belt Anchorage	270
10A	GAUGE	Back-Up Light	110
		Charging	64
		Combination Meter	306
		Cruise Control	220
		Electronically Controlled Transmission and A/T Indicator	192
		Electronically Modulated Air Suspension	200
		Engine Control and Engine Immobiliser System	66
		Headlight Beam Level Control	94
		Illumination	132
		Key Reminder and Seat Belt Warning	232
		Multiplex Communication System	142
		PPS	246
		Shift Lock	238
		Stop Light	138
		Taillight	116
		VSC	208
		Wiper and Washer	280
10A	HEATER	Automatic Air Conditioning	314
		Radiator Fan	312
		Rear Window Defogger and Mirror Heater	276

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
10A	IGN	Cruise Control	220
		Electronically Controlled Transmission and A/T Indicator	192
		Engine Control and Engine Immobiliser System	66
		SRS	227
15A	FR CIG	Cigarette Lighter	284
		SRS	227
15A	FR FOG	Fog Light (w/o Daytime Running Light)	112
		Headlight and Fog Light (w/ Daytime Running Light)	82
15A	PWR-IG	Auto Antenna	294
		Automatic Glare-Resistant EC Mirror	278
		Automatic Light Control	104
		Cellular Mobile Telephone	290
		Electric Tension Reducer	274
		Headlight Beam Level Control	94
		Headlight Cleaner (Canada)	90
		Interior Light	120
		Key Reminder and Seat Belt Warning	232
		Light Auto Turn Off	98
		Moon Roof	216
		Multiplex Communication System	142
		Power Seat (w/ Driving Position Memory)	254
		Power Shoulder Belt Anchorage	270
		Power Tilt and Power Telescopic	242
		Power Window	162
		Remote Control Mirror	248
		Shift Lock	238
15A	RADIO NO.2	Theft Deterrent and Door Lock Control	182
		Wireless Door Lock Control	172
		Auto Antenna	294
		Automatic Air Conditioning	314
		Automatic Light Control	104
		Clock	286
		Combination Meter	306
		Interior Light	120
		Key Reminder and Seat Belt Warning	232
		LEXUS Navigation System	302
		Light Auto Turn Off	98
		Multiplex Communication System	142
		Power Window	162
		Radio and Player	296
		Remote Control Mirror	248
		Shift Lock	238
		Theft Deterrent and Door Lock Control	182
		Wiper and Washer	280

* These are the page numbers of the first page on which the related system is shown.

POWER SOURCE (Current Flow Chart)

Fuse		System	Page
15A	RADIO NO.2	Wireless Door Lock Control	172
15A	RR CIG	Cigarette Lighter Power Outlet	284 288
20A	AIR SUS	Electronically Modulated Air Suspension	200
20A	D RR DOOR	Interior Light	120
		Multiplex Communication System	142
		Power Window	162
		Theft Deterrent and Door Lock Control	182
		Wireless Door Lock Control	172
20A	P RR DOOR	Interior Light	120
		Multiplex Communication System	142
		Power Window	162
		Theft Deterrent and Door Lock Control	182
		Wireless Door Lock Control	172
20A	WASHER	Multiplex Communication System	142
		Wiper and Washer	280
20A	WIPER	Multiplex Communication System	142
		Wiper and Washer	280
25A	STOP LP	Cruise Control	220
		Electronically Controlled Transmission and A/T Indicator	192
		Electronically Modulated Air Suspension	200
		Multiplex Communication System	142
		Shift Lock	238
		Stop Light	138
		VSC	208
30A	PWR	Moon Roof	216
		Power Seat (Rear Passenger's Seat)	266
		Power Shoulder Belt Anchorage	270
		Power Tilt and Power Telescopic	242
30A	SEAT FR	Power Seat (w/ Driving Position Memory)	254
		Power Seat (w/o Driving Position Memory)	262

Engine Room J/B

		VSC	82 208
7.5A	OBD	Electronically Controlled Transmission and A/T Indicator	192
		Engine Control and Engine Immobiliser System	66
10A	DOME	Combination Meter	306
		Electronically Modulated Air Suspension	200
		Garage Door Opener	130
		Illumination	132

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
10A	DOME	Interior Light	120
		LEXUS Navigation System	302
		Light Auto Turn Off	98
		Multiplex Communication System	142
		Power Seat (w/ Driving Position Memory)	254
		Power Window	162
		Radio and Player	296
		Theft Deterrent and Door Lock Control	182
		Wireless Door Lock Control	172
10A	EFI NO.2	Cruise Control	220
		Electronically Controlled Transmission and A/T Indicator	192
		Engine Control and Engine Immobiliser System	66
10A	H-LP L UPR	Headlight (w/o Daytime Running Light)	78
		Headlight and Fog Light (w/ Daytime Running Light)	82
10A	H-LP R UPR	Combination Meter	306
		Headlight (w/o Daytime Running Light)	78
		Headlight and Fog Light (w/ Daytime Running Light)	82
10A	HAZ	Turn Signal and Hazard Warning Light	114
10A	HORN	Horn	224
		Multiplex Communication System	142
		Theft Deterrent and Door Lock Control	182
10A	MPX-B	Automatic Light Control	104
		Combination Meter	306
		Headlight (w/o Daytime Running Light)	78
		Interior Light	120
		Key Reminder and Seat Belt Warning	232
		Light Auto Turn Off	98
		Multiplex Communication System	142
		Power Shoulder Belt Anchorage	270
		Power Tilt and Power Telescopic	242
		Power Window	162
		Remote Control Mirror	248
		SRS	227
		Theft Deterrent and Door Lock Control	182
		Wireless Door Lock Control	172
15A	CRT	LEXUS Navigation System	302
15A	ETCS	Cruise Control	220
		Engine Control and Engine Immobiliser System	66
15A	FR S/HTR	Seat Heater	268
15A	MIR-HTR	Rear Window Defogger and Mirror Heater	276
15A	TEL	Cellular Mobile Telephone	290
20A	EFI NO.1	Cruise Control	220
		Electronically Controlled Transmission and A/T Indicator	192

* These are the page numbers of the first page on which the related system is shown.

POWER SOURCE (Current Flow Chart)

Fuse		System	Page
20A	EFI NO.1	Engine Control and Engine Immobiliser System	66
20A	RADIO NO.1	Auto Antenna	294
		LEXUS Navigation System	302
		Radio and Player	296
30A	RDI FAN	Radiator Fan	312
30A	ST	Starting and Ignition	60

Engine Room R/B

			82
15A	H-LP L LWR	Headlight (w/o Daytime Running Light)	78
		Headlight and Fog Light (w/ Daytime Running Light)	82
15A	H-LP R LWR	Fog Light (w/o Daytime Running Light)	112
		Headlight (w/o Daytime Running Light)	78
		Headlight and Fog Light (w/ Daytime Running Light)	82
40A	H/CTRL	Electronically Modulated Air Suspension	200

Fusible Link Block (F15 See on Page 31)

Fuse		System	Page
30A	AM2	Engine Control and Engine Immobiliser System	66
		Starting and Ignition	60
40A	AM1	Headlight Cleaner (Canada)	90
50A	DEFOG	Rear Window Defogger and Mirror Heater	276
50A	HEATER	Automatic Air Conditioning	314
60A	ABS	VSC	208
80A	MAIN	Automatic Light Control	104
		Headlight (w/o Daytime Running Light)	78
		Headlight and Fog Light (w/ Daytime Running Light)	82
		Headlight Beam Level Control	94
		Headlight Cleaner (Canada)	90
		Illumination	132
		Light Auto Turn Off	98
		Multiplex Communication System	142
		Starting and Ignition	60
		Theft Deterrent and Door Lock Control	182
120A	ALT	Automatic Air Conditioning	314
		Automatic Light Control	104
		Charging	64
		Headlight Cleaner (Canada)	90
		Illumination	132
		Light Auto Turn Off	98
		Multiplex Communication System	142
		Taillight	116

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
120A	ALT	Theft Deterrent and Door Lock Control	182
		VSC	208

Fuse Holder (F37 See On Page 34)

Fuse		System	Page
20A	D FR DOOR	Automatic Light Control	104
		Interior Light	120
		Key Reminder and Seat Belt Warning	232
		Light Auto Turn Off	98
		Power Window	162
		Remote Control Mirror	248
		Theft Deterrent and Door Lock Control	182
		Wireless Door Lock Control	172
		Multiplex Communication System	142
20A	P FR DOOR	Interior Light	120
		Multiplex Communication System	142
		Power Window	162
		Remote Control Mirror	248
		Theft Deterrent and Door Lock Control	182
		Wireless Door Lock Control	172

* These are the page numbers of the first page on which the related system is shown.