


INSPECTION

1. INSPECT SEAT HEATER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
ON	2 - 3 - 6	Continuity
OFF	-	No continuity
Illumination circuit	1 - 4	Continuity


If continuity is not as specified, replace the switch.

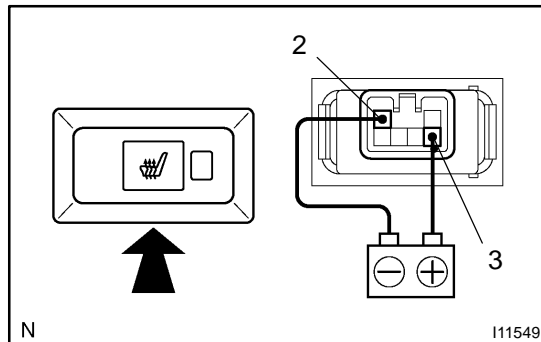

2. INSPECT SEAT HEATER INDICATOR LIGHT OPERATION

- Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 2.
- Push the seat heater switch ON that the indicator light lights up.

If operation is not as specified, replace the switch and inspect the circuits connected to other parts.

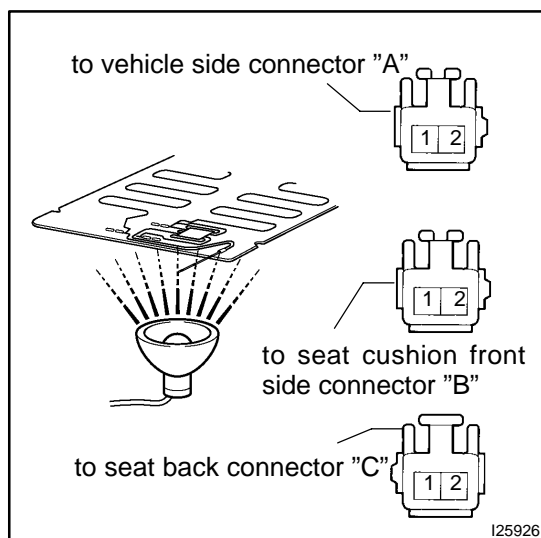


3. INSPECT SEAT HEATER CUSHION REAR SIDE CONTINUITY

- Heat the thermostat with a light.
- Inspect the seat heater cushion continuity between terminals, as shown.

Tester connection	Condition	Specified condition
A1 - B2	Seat heater temperature below 25 °C (77 °F)	Continuity
A1 - B2	Seat heater temperature above 45 °C (113 °F)	No continuity
A2 - B1	Always	Continuity
A2 - C1	Always	Continuity
B2 - C2	Always	Continuity

If continuity is not as specified, replace the seat cushion pad.

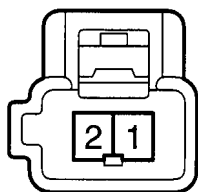Wire Harness Side


I25927

4. INSPECT SEAT HEATER CUSHION CIRCUIT

Disconnect the connector from the seat heater cushion and inspect the connector on wire harness side, as shown.

Tester connection	Condition	Specified condition
2 - Body ground	Seat heater switch ON	Battery Positive Voltage

If circuit is not as specified, inspect the wire harness.

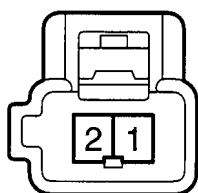


I25927

5. INSPECT SEAT CUSHION FRONT SIDE CONTINUITY

Inspect the seat cushion front side continuity between terminals, as shown.

Tester connection	Condition	Specified condition
1 - 2	Always	Continuity

If continuity is not as specified, replace the seat cushion pad.

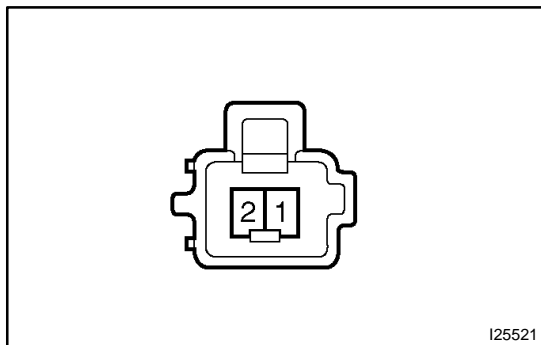**6. INSPECT SEAT BACK CONTINUITY**

Inspect the seat back continuity between terminals, as shown.

Tester connection	Condition	Specified condition
1 - 2	Always	Continuity

If continuity is not as specified, replace the seat back pad.