


INSPECTION

1. INSPECT TURN SIGNAL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Left turn	1 - 2	Continuity
Neutral	-	No continuity
Right turn	2 - 3	Continuity

If continuity is not as specified, replace the switch.

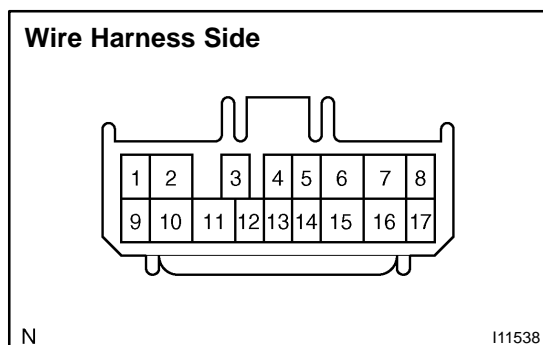


2. Connector disconnected:

INSPECT TURN SIGNAL SWITCH CIRCUIT

Disconnect the connector from the combination switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
2 - Ground	Always	Continuity

If circuit is not as specified, inspect the wire harness.

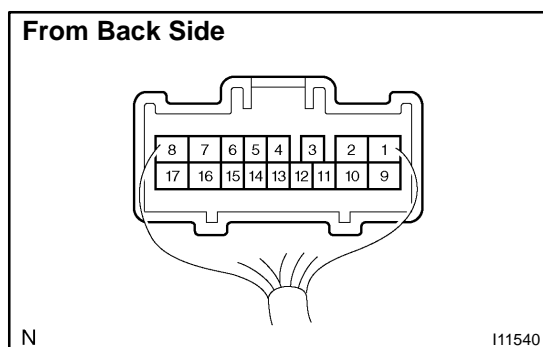

3. Connector connected:

INSPECT TURN SIGNAL SWITCH CIRCUIT

Connect the wire harness side connector to the combination switch and inspect the connector from the back side, as shown.

Tester connection	Condition	Specified condition
2 - Ground	Ignition switch ON and turn signal switch Neutral	No voltage
1 - Ground	Ignition switch ON and turn signal switch Left	Battery Positive Voltage ↔ 0 V
3 - Ground	Ignition switch ON and turn signal switch Right	Battery Positive Voltage ↔ 0 V

If circuit is not as specified, inspect the circuits connected to other parts.